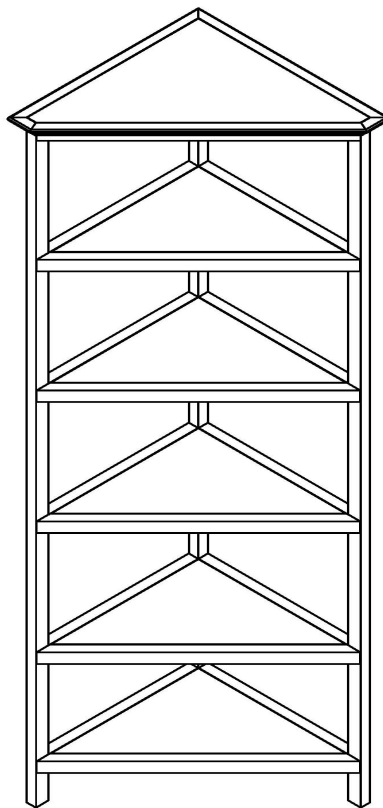
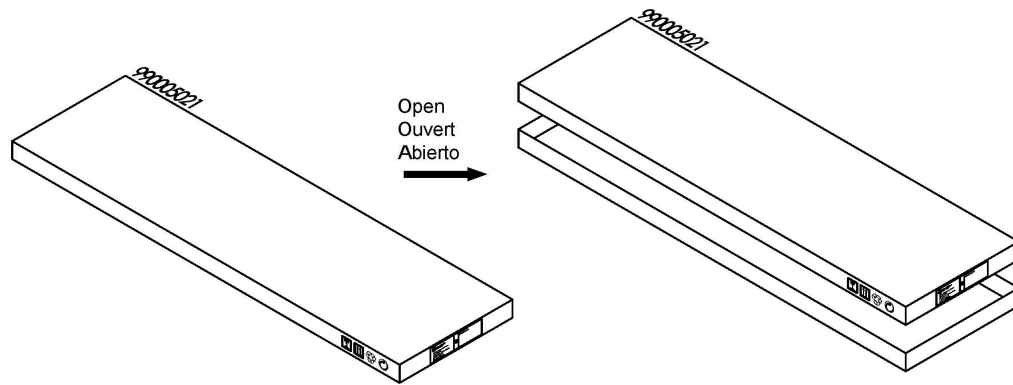
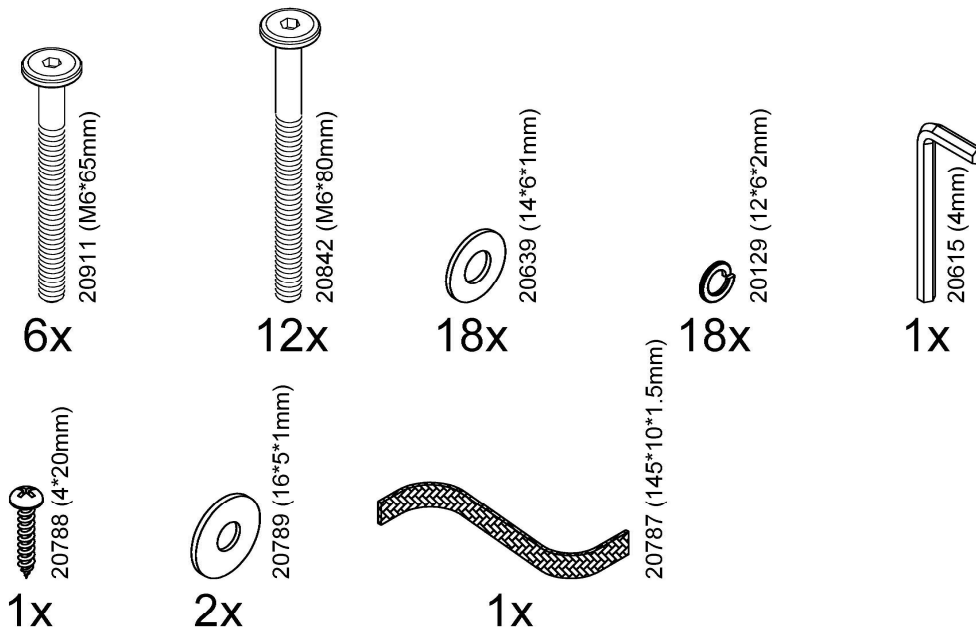
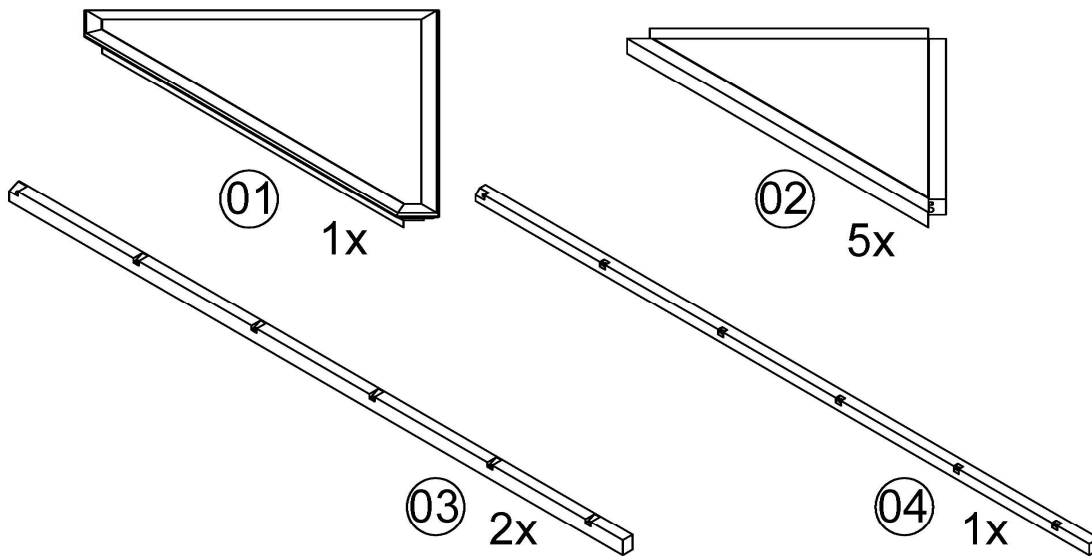

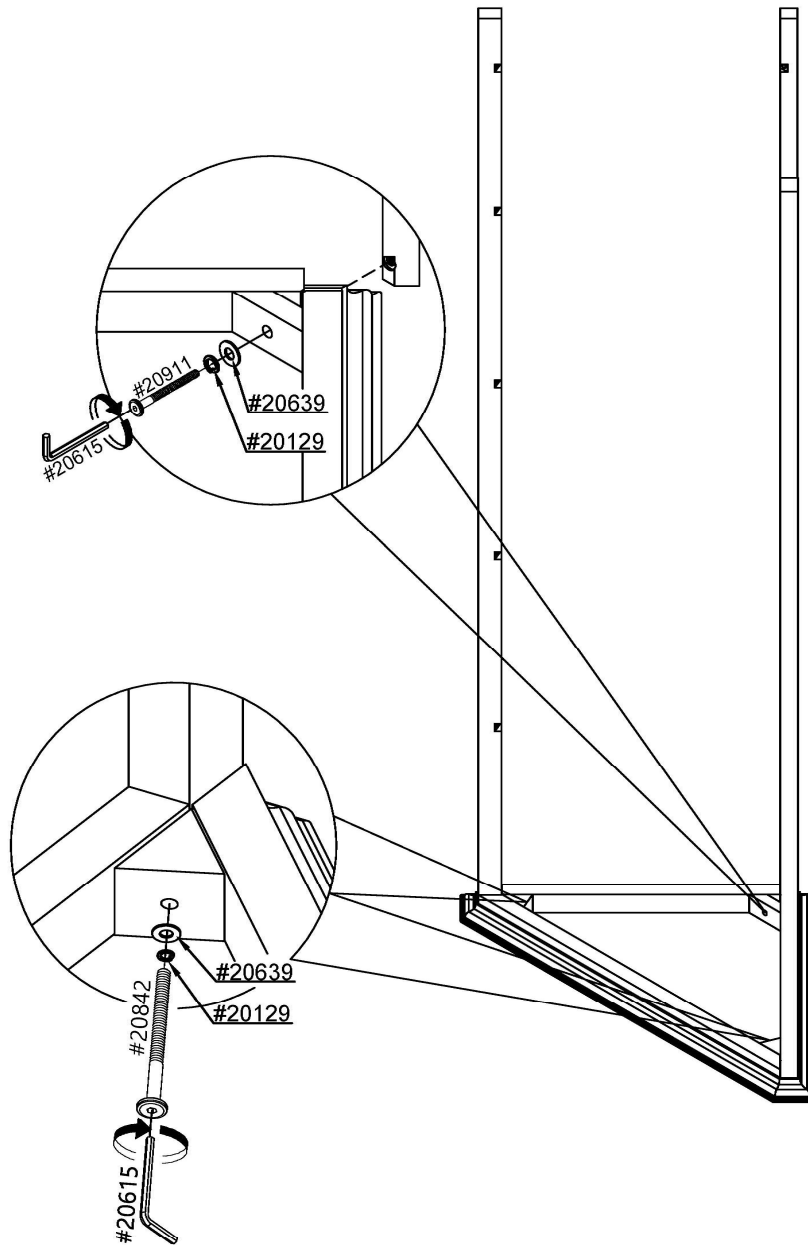
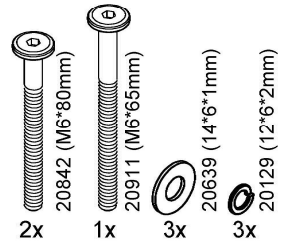
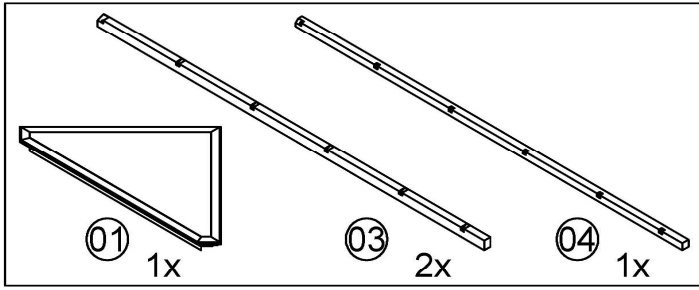





**NO CLIMBING**




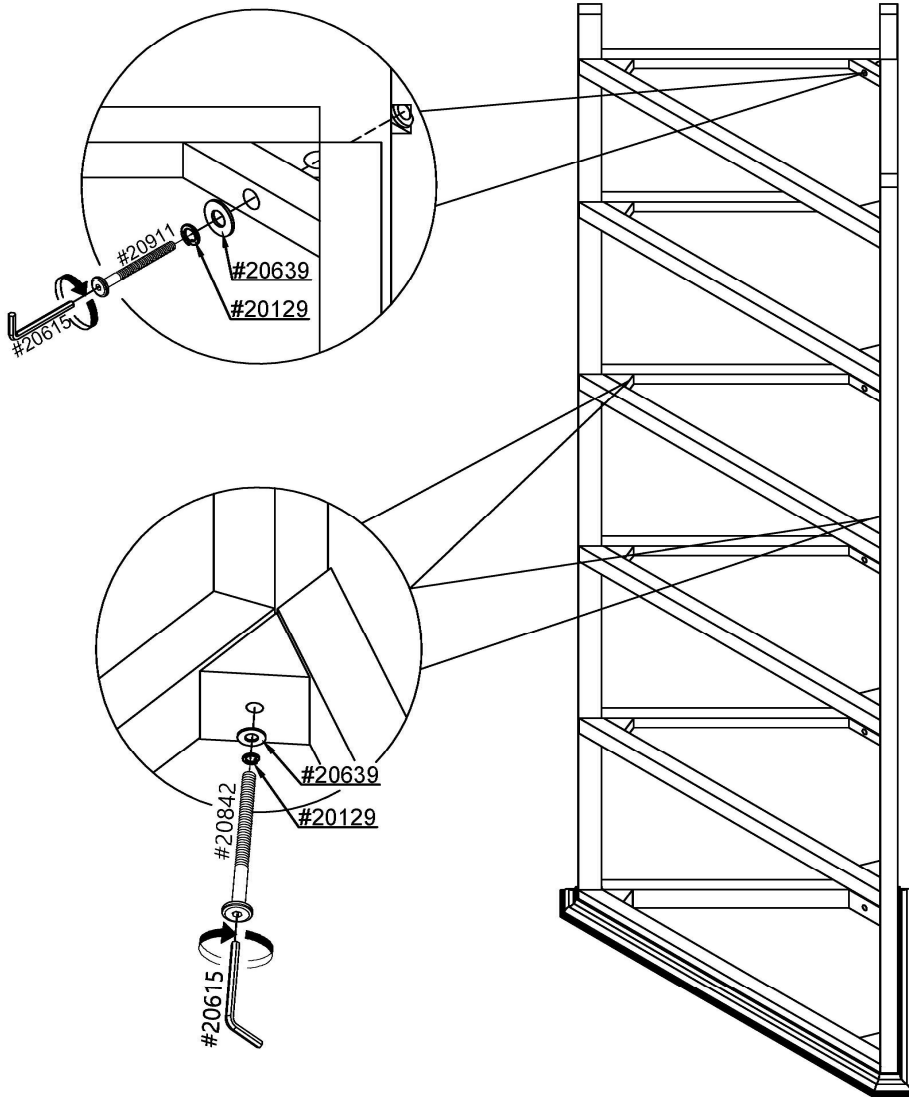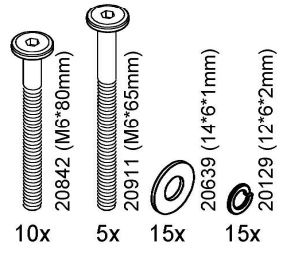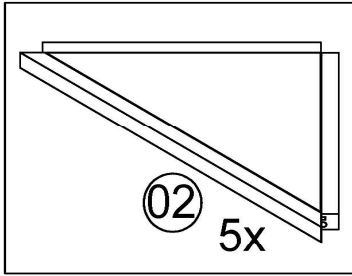
<p><b>⚠ WARNING:</b>  <b>CHOKING HAZARD--Small Parts</b>          Not for children under 3 years.          To be Assembled by an Adult</p>	<p>Not Include          Non Inclus          No Incluido</p>	
--	---	---





**AN OPTIONAL TIPPING RESTRAINT DEVICE IS PROVIDED FOR ADDITIONAL SAFETY**

- 1) See above Tipping Restraint Device
- 2) Open Tipping Restraint Device package and remove the screw, washer and strap.
- 3) Secure the strap under the top or middle shelf of the furniture with the provided washer and screw. Then connect the strap to the wall using an appropriate anchor, washer and screw (not included) for your wall.

